

Nastavitve brezžičnega usmerjevalnika **NETGEAR WPN824**



Priklop:


NAPAJANJE:

Napajalnik povežite z napravo NETGEAR in priključite na napajanje.

WAN:

V priključek WAN vklopite kabel UTP ter njegov drugi konec priključite na naš kabelski modem Thompson/Arris.

LAN: Na štiri proste priključke LAN lahko priključite naprave, ki uporabljajo internetno povezavo (računalniki, TV itd.).

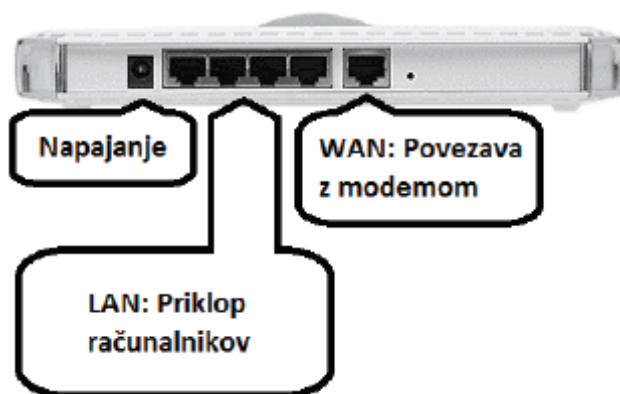


Dostop do usmerjevalnika:

V naslovni vrstici internetnega brskalnika izbrišite trenutno prikazani spletni naslov.

V naslovno vrstico vpišite naslov 192.168.1.1 in pritisnite tipko ENTER.

Prikaže se prijavno okence, kamor morate vpisati podatke za dostop. Ko jih vpišete, pritisnite na gumb OK/V redu.

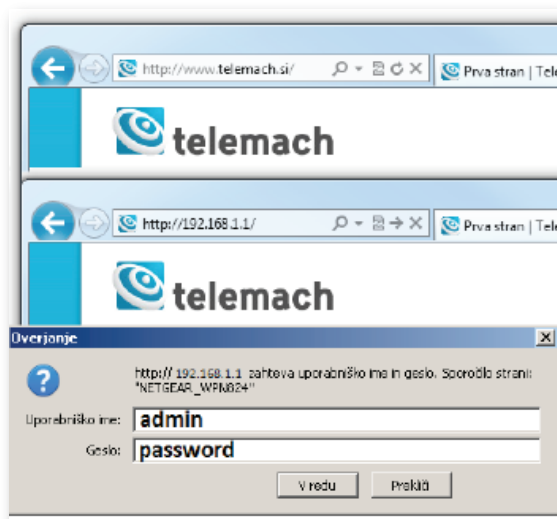

Splošne nastavitve:

Odpre se nastavitvena stran brezžičnega usmerjevalnika. Izbirni meni se nahaja na levi strani.

Osnovne nastavitve oziroma Basic Settings so ključne za delovanje brezžičnega usmerjevalnika.

Osnovne nastavitve so navedene na levi strani in morajo biti na vašem brezžičnem usmerjevalniku enake.

- Setup Wizard
- Setup
 - Basic Settings
 - Wireless Settings
- Content Filtering
 - Logs
 - Block Sites
 - Block Services
 - Schedule
 - E-mail
- Maintenance
 - Router Status
 - Attached Devices
 - Backup Settings
 - Set Password
 - Router Upgrade
- Advanced
 - Wireless Settings
 - Port Forwarding / Port Triggering
 - WAN Setup
 - LAN IP Setup
 - Dynamic DNS
 - Static Routes
 - Remote Management
 - UPnP
- Web Support
 - Knowledge Base

Basic Settings

Does Your Internet Connection Require A Login?

- Yes
 No

Account Name (If Required)

Domain Name (If Required)

Internet IP Address

- Get Dynamically From ISP
 Use Static IP Address
- IP Address
IP Subnet Mask
Gateway IP Address

Domain Name Server (DNS) Address

- Get Automatically From ISP
 Use These DNS Servers
- Primary DNS
Secondary DNS

Router MAC Address

- Use Default Address
 Use Computer MAC Address
 Use This MAC Address

Brezžične nastavitve:

SSID (poimenovanje povezave):
Vpišite zeleno ime brezžičnega omrežja.

Region:

Možnost nastavite na Evropo.

Channel:

Načeloma ta nastavev ni pomembna.

Mode:

Načeloma nastavev ni pomembna, običajno se izbere možnost **g and b**.

Security Options:

Najbolj primerna nastavev je **WPA-PSK (TKIP)**.

Passphrase:

Vpišite zeleno geslo
(dolžina je lahko od 8 do 64 znakov).

Pritisnite gumb Shrani oziroma Apply. Počakajte nekaj trenutkov, da se nastavitve shranijo.

- Setup Wizard
 - Setup
 - Basic Settings
 - Wireless Settings
 - Content Filtering
 - Logs
 - Block Sites
 - Block Services
 - Schedule
 - E-mail
 - Maintenance
 - Router Status
 - Attached Devices
 - Backup Settings
 - Set Password
 - Router Upgrade
 - Advanced
 - Wireless Settings
 - Port Forwarding / Port Triggering
 - WAN Setup
 - LAN IP Setup
 - Dynamic DNS
 - Static Routes
 - Remote Management
 - UPnP
 - Web Support
 - Knowledge Base
 - Documentation
- Logout

Wireless Settings

Wireless Network

Name (SSID):
Region:
Channel:
Mode:

Security Options

- Disable
 WEP (Wired Equivalent Privacy)
 WPA-PSK (TKIP)
 WPA2-PSK [AES]
 WPA-PSK (TKIP) + WPA2-PSK [AES]

Security Options (WPA-PSK)

Passphrase: (8-63 characters)