
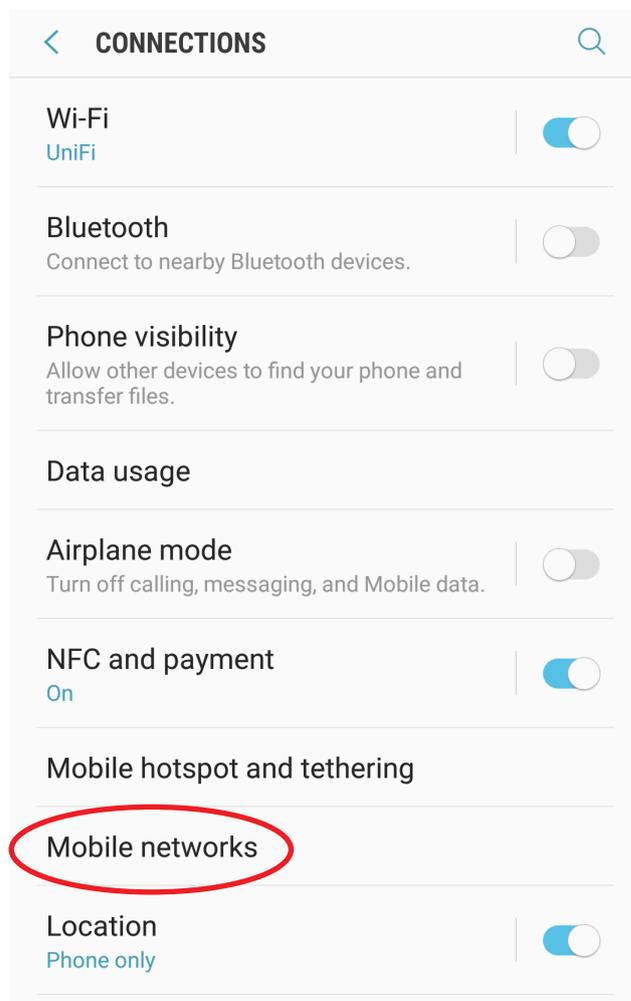


telemach



mob.

**NASTAVITVE
DOSTOPNE TOČKE
IN NAČINA DOSTOPA
DO OMREŽJA ZA
NAPRAVE SAMSUNG**

1. Odprite meni za nastavitve.
2. V nastavitvah brezžičnega omrežja izberite možnost **Povezave** (Connections) in nato v podmeniju tapnite možnost **Mobilna omrežja** (Mobile networks).

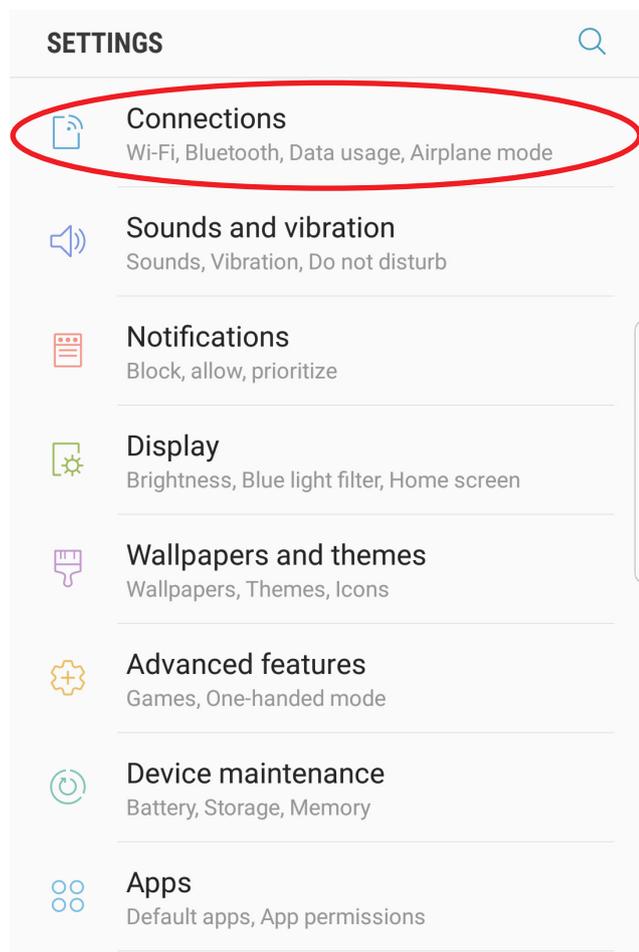

3. V nadaljevanju izberite možnost **Imena dostopnih točk** (Access Point Names) ter v meniju izberite **Dodaj** (Add).

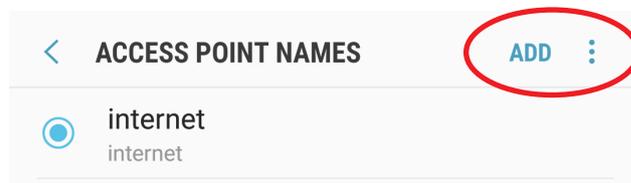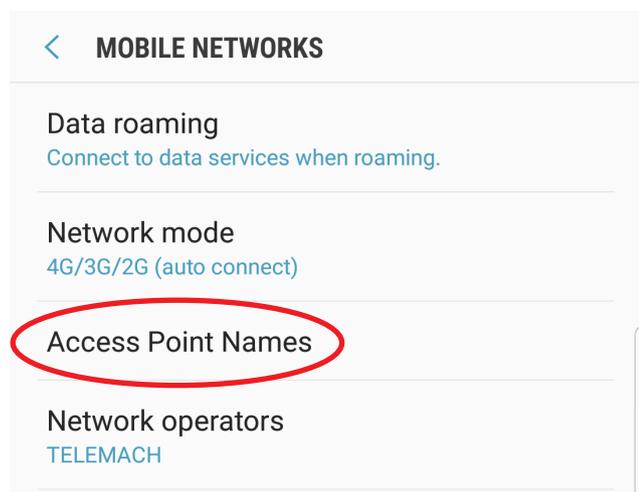

4. Vpišite podatke za novo točko APN:

Ime (Name): Internet

APN: internet

Storitveni center za sporočila MMS (MMSC): http://mms.telemach.net:8002

Strežnik proxy za sporočila MMS (MMS proxy): 91.185.221.85

Vrata MMS (MMS port): 8080

Mobilna koda države (MCC): 293


Koda mobilnega omrežja (MNC): 70

Vrsta preverjanja pristnosti (Authentication type): PAP

Vrsta APN (APN type): default,supl,mms

Protokol APN (APN protocol): IPv4

Protokol za gostovanje APN (APN roaming protocol): IPv4

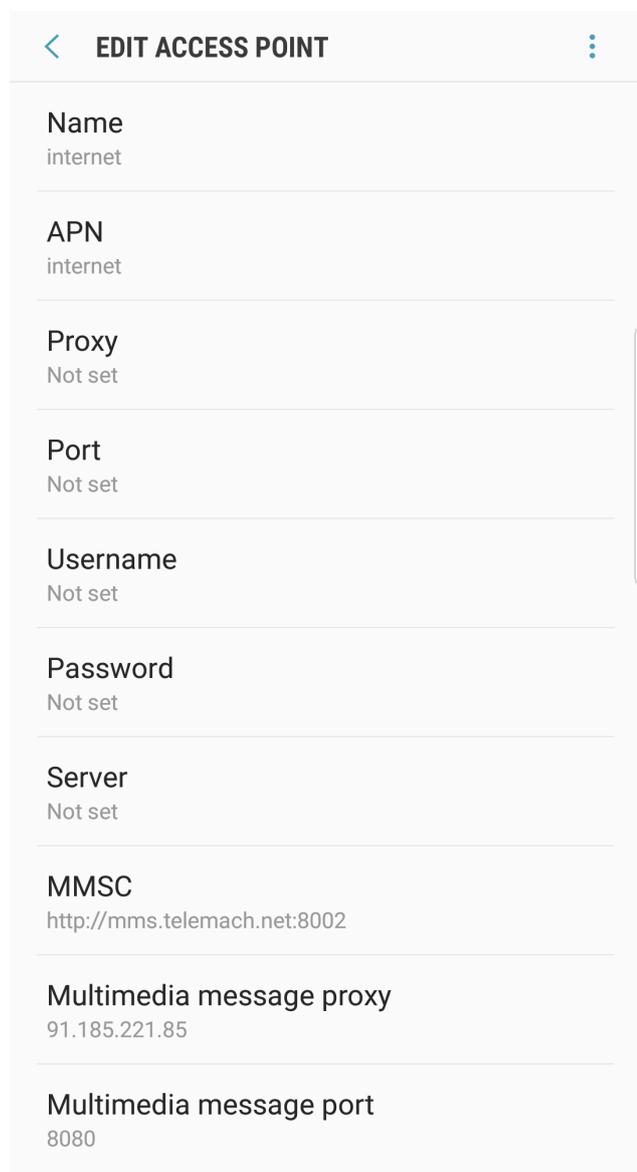

EDIT ACCESS POINT

Name
internet

APN
internet

Proxy
Not set

Port
Not set

Username
Not set


Password
Not set

Server
Not set

MMSC
http://mms.telemach.net:8002

Multimedia message proxy
91.185.221.85

Multimedia message port
8080

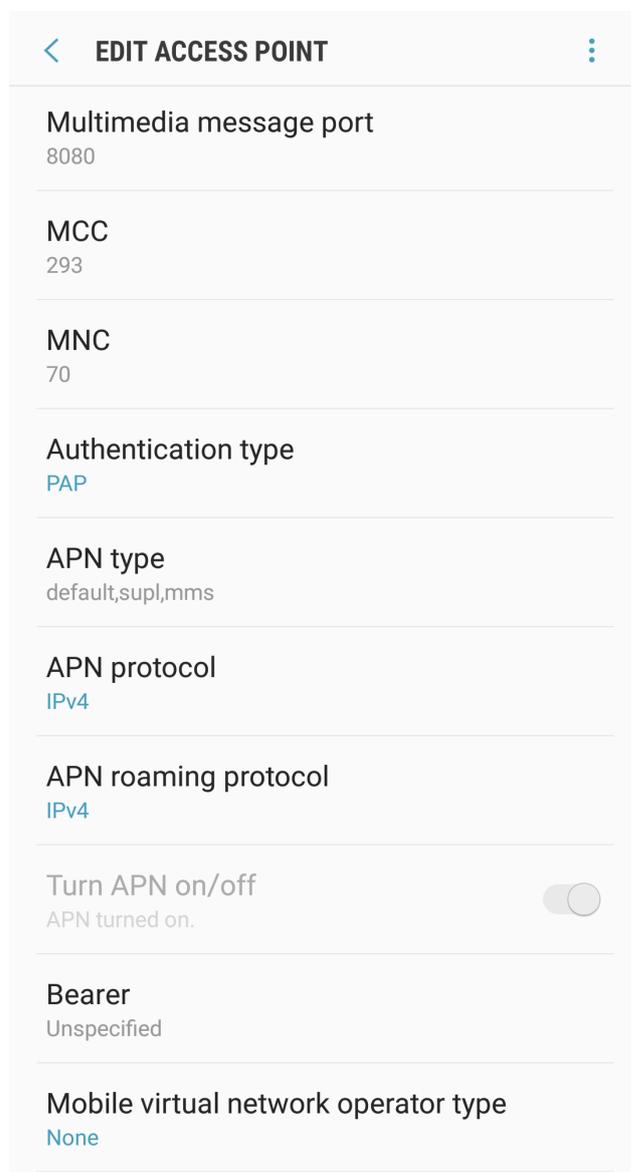

EDIT ACCESS POINT

Multimedia message port
8080

MCC
293

MNC
70

Authentication type
PAP

APN type
default,supl,mms

APN protocol
IPv4


APN roaming protocol
IPv4

Turn APN on/off
APN turned on.

Bearer
Unspecified

Mobile virtual network operator type
None

5. Po vpisu podatkov izberite meni in možnost **Shrani** (Save).

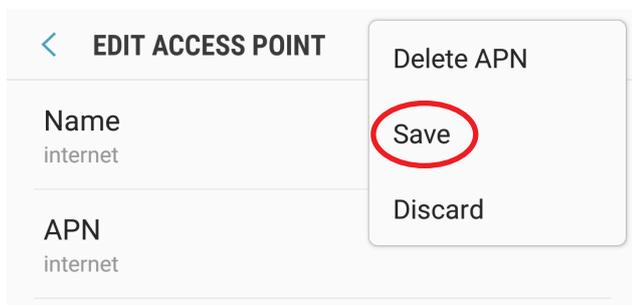

The screenshot shows a mobile application interface for editing an access point. At the top left, there is a back arrow and the text 'EDIT ACCESS POINT'. Below this, there are two input fields: 'Name' with the value 'internet' and 'APN' with the value 'internet'. On the right side, there is a menu with three options: 'Delete APN', 'Save', and 'Discard'. The 'Save' option is circled in red.

Opomba: Vsa ostala polja morajo ostati prazna.

6. Po vnosu podatkov priporočamo, da napravo ponovno zaženete (**Restart**).